老马彩色说明书11月版

包角线:591*432mm

product structure

product manual

product manual

1. USB
2. Rebuild
3. SD card slot
4. Speaker
5. Indicator light
6. Lens
7. Power button
8. Video button / camera button
9. Display
10. Down button
11. Mode button
12. Menu button
13. RECALL BUTTON

Instruction Manual

Button function description

1, USB
USB data interface. 1 is used to connect PC to transmit data; 2 is used to connect external power supply to charge battery or provide working power.

2, Mode key
The following modes can be switched in standby mode: 1 recording mode. 2 camera mode. 3 video playback and photo browsing mode;

3, SD card slot
Install the slot of the SD card;

4, Speaker
Play a sound of a sound video or file;

5, Microphone
a sound receiving port of a video or an audio file;

6, Lens
Viewfinder window

7, Power button
1 for equipment switching machine; 2 charging indicator;

8, Recording button / camera button
1 In the camera mode, short press this button to start recording. short press again to stop recording;
2 short press this button to take a photo in the camera mode;
3 in the menu mode is the confirmation button;

9, Display
2.0 inch color display;

10, Menu button
Short press this button to call up the function setting menu; press this button again to exit the function setting menu;

11, Down button
In the menu options, select the function key down;

12, Page up
In the menu options, select the function key up;

Basic operation instructions for camera/photo

1, Power on and off
Press and hold the power button to turn it on, the blue indicator will light up when it is turned on;
Pressing the power button again is off. and the blue indicator is off;

2, Camera mode
Short press "Mode button" to switch to camera mode, and display the camera resolution and camera icon in the upper right corner of the screen;
Short press the "Video/Photo" button to start recording. the recording indicator will start flashing. indicating the recording work;

3, Photo mode
Short press the "Mode button" to switch to the camera mode, and the camera resolution and camera icon are displayed in the upper right corner of the screen;
Short press the "Video/Photo button" to take a picture. When the picture is taken, the indicator flashes once, indicating that the picture is comp leted.

4, Video / photo playback
Short press the "Mode Key" button to switch to the playback mode, and the playback icon will be displayed in the upper right corner of the screen Short press the "Up" button to select the file upwards;
Short press the "Down" button to select the file down;

5, Menu settings
Short press "Menu" to call up the setup menu; By pressing the "Up" button or "Down button", you can cycle up and down in each setting item;
Select the setting item that needs to be changed, and confirm the entrycharge by short pressing the "Video. Camera button";

6, Exit the setup menu
Short press the "menu button" to exit the setting state;

USB mode

Connect the USB cable to the computer and the child camera will automatically connect to the USB;
In this mode, video files or photo files can be read and accessed;

Battery instructions

1. Battery indicator, please refer to the illustration:

Full battery Lower battery Low battery Empty battery

2. There are three ways to charge the battery, and the blue charging indicator will light up during charging.

1: Charging with the power adapter
2: Charging with PC-USB
3: Charging with the car power supply

Remark: When using this product, it may cause the phenomenon of crash due to improper operation. You can remove the battery or press the reset button and then turn it on again to return to normal.

Product specifications

Image sensor	GC0308
Display	color display
Lens	Fixed lens. 100 degree angle
Storage medium	Mini sd card, up to 32G
Photo format	JPG
Language	Russian. English. Chinese (Simplified). Chinese (Traditional). Korean. Japanese. etc
Camera format	JPEG
Video resolution	1080P: 1440x1080 720P: 1280x720 VGA: 640x480
TFT display	2.0 inch screen (720x320)
Time mark	off. on
Motion detection	off. on
Loop recording	off. 1 minute. 3 minutes. 5 minutes. 10 minutes
Photo resolution	5M 2M 1.3M VGA
Photo frame	normal. background 1
Delete	delete single. delete all
Format	Cancel. execute
Charging voltage	DC-5V
Support system	Windows me/2000/2003/XP/vista/Win7/ Macos /Linux
Optical frequency	50HZ. 60HZ
Reset system	Cancel. execute
Version	D600-0164-3703
Game	Snake

产品结构

产品说明

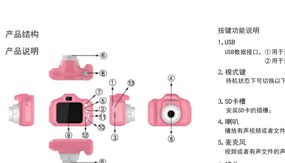

1. USB
2. 上翻建
3. SD卡槽
4. 喇叭
5. 指示灯
6. 镜头
7. 电源键
8. 录像键/拍照键
9. 显示屏
10. 下翻建
11. 模式键
12. 菜单键

使用说明书

Instruction Manual

按键功能说明

1, USB
USB数据接口。①用于连接PC传输数据;
②用于连接外接电源给电池充电或提供工作电源;

2, 模式键
待机状态下可切换以下模式: ①录像模式. ②拍照模式.
③视频播放和照片浏览模式.

3, SD卡槽
安装SD卡的插槽;

4, 喇叭
播放有声视频或者文件的扩音;

5, 麦克风
视频或者有声文件的声音接收口;

6, 镜头
取景窗口

7, 电源键
①用于设备开关机; ②充电指示灯;

8, 录像键/拍照键
①录像模式下, 短按此键开始录像。再次短按停止录像
②拍照模式下短按此键拍照片。③菜单模式下为确认按钮;

9, 显示屏
2.0寸彩色显示屏;

10, 菜单键
短按此键调出功能设置菜单; 再次短按此键退出功能设置菜单;

11, 下翻建
菜单选项中, 向下选择功能键;

12, 上翻页
菜单选项中, 向上选择功能键;

摄像/拍照基本操作说明

1, 开机与关机
长按电源按键开机。蓝色指示灯会点开机时亮起;
再次长按电源按键关机, 此时蓝色指示灯熄灭;

2, 摄像模式
短按"模式键", 切换到摄像模式, 屏幕右上角分别显示摄像分辨率和摄像图标;
短按"录像/拍照"键开始摄像, 录像指示灯开始闪烁和录像工作中;

3, 拍照模式
短按"模式键", 切换到拍照模式, 屏幕右上角分别显示拍照分辨率和拍照图标;
短按"录像/拍照键"拍照, 拍照时指示灯闪烁一次表示拍照完成;

4, 视频/照片回放
短按"模式键"键, 切换到回放模式, 屏幕右上角显示回放图标;
短按"上翻键"可以向上选择文件;
短按"下翻键"键可以向下选择文件;
短按"录像、拍照键"键播放选择的视频文件;

5, 菜单设置
短按"菜单键", 调出设定菜单;
通过短按"上翻键"或"下翻键", 可以在各设置项中循环上下选择;
选择需要更改的设置项, 通过短按"录像、拍照键"确认进入更改;

6, 退出设定菜单:
短按"菜单键"。退出设置状态;

USB模式 将USB线与电脑连接, 儿童相机将自动连接USB;
在此模式下可进行视频文件或者照片文件的读取和存取;

电池使用说明

1. 电池电量指示, 请参考图示:

电量充足 电量稍低 电量低 电量不足

2. 有三种方法可以对电池充电, 蓝色充电指示灯会在充电的过程中亮起。

①: 使用电源适配器充电 ②: 使用PC-USB充电

③: 使用车载电源充电

备注: 当使用此产品因操作不当引起当机现象, 可以拔掉电池或按复位键后再开机, 即可恢复正常。

产品规格

影像传感器	GC0308
显示屏	彩色显示屏
镜头	固定镜头, 100度角
存储媒介	Mini sd卡, 最大支持32G
照片格式	JPG
语言	俄. 英. 中文（简）. 中文（繁）. 韩. 日等
摄像格式	JPEG
摄像分辨率	1080P: 1440x1080 720P:1280x720 VGA: 640x480
TFT显示屏	2.0寸屏 (720x320)
时间标志	关闭. 开启
移动检测	关闭. 开启
循环录像	关闭. 1分钟. 3分钟. 5分钟. 10分钟
拍照分辨率	3M. 2M. 1.3M. VGA
相框	正常. 背景1
删除	删除单张. 删除全部
格式化	取消. 执行
充电电压	DC-5V
可支持系统	Windows me/2000/2003/XP/Vista/Win7/Mac os/linux
光频	50HZ. 60HZ
复位系统	取消. 执行
版本	D600-0164-3703
游戏	贪吃蛇

合格证